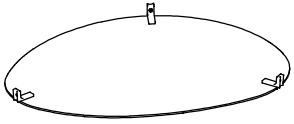



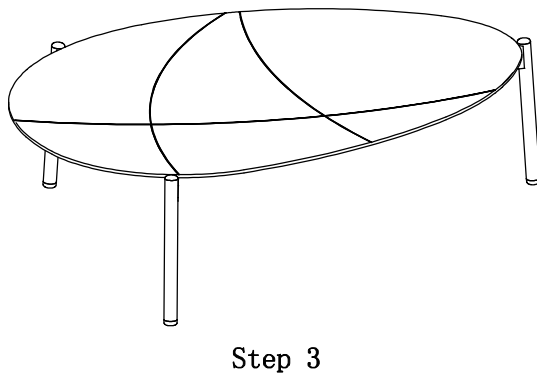
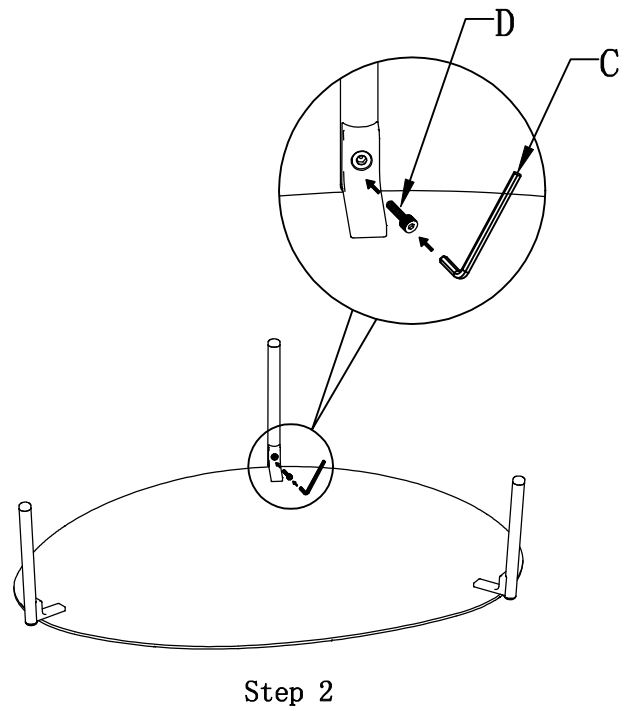
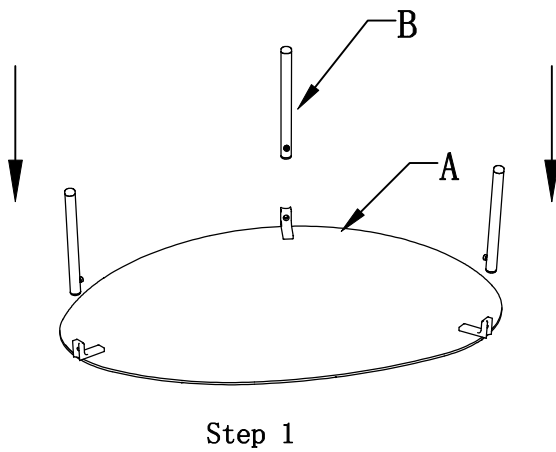


# ASSEMBLY INSTRUCTION

## 1. Accessories

<b>A</b>  1 PC	<b>B</b>  3 PC	<b>C</b>  Allen Key 6MM 1pc	<b>D</b>  M8*20 Screw 3PCS
---	---	---	---

## 2. Steps:



**cantoni.**